



HEATER ACCESSORIES



Optional accessories to customize the installation of Proheat Air.

HEATER MOUNTING PLATE

The Proheat Air mounting plate makes attaching the heater to the vehicle floor quick and easy as well as ensuring a good seal. This plate should be used when the flooring is uneven or too thick for the heater mounting bolts to fully penetrate through, or if the floor material is heat sensitive. Includes a gasket.

	Part No.
Proheat A2 Mounting Plate	210283K
Proheat A4 Mounting Plate	210383K

EXTERNAL TEMPERATURE SENSOR

This extra sensor can be mounted outside the truck cab to measure the ambient temperature, or inside a trailer to monitor temperature in the cargo area. This sensor is in addition to temperature sensors built into both the heater and the driver control panel (DCP).

	Part No.
External Temperature Sensor	210239K

HOT AIR DUCT

This temperature-rated ducting bends easily so it can be run around obstructions and is specifically designed for heater use. Any ducting installed with Proheat Air must have a minimum diameter of 3 inches (75 mm) and a minimum temperature rating of 300°F (150°C).

	Part No.
A2: 3.0" (75 mm) – 25' roll.	210402K
A4: 3.5" (90 mm) – 25' roll.	210403K
3" Hose Clamp Kit 10/package.	210378K

HOT AIR VENT/DIFFUSER

This hot air vent is directional so air flow can be focused wherever needed. For added safety the vents are not closable to ensure continuous air flow when the heater is operating. A reducer is available that allows a 3.5" duct to connect to the hot air vent.

	Part No.
Hot Air Vent 3" (75 mm)	210260K
Reducer 3.5" (90mm) to 3" (75mm).	210380K